

Firmware update instructions TQC WiFi Remote Control LSP-FRTQC







((



FIRMWARE UPDATE

First of all, you need to connect the device to a power supply before uploading. You can use a regular type-c charger or your computer's USB socket with a type-c cable.



Press the button through the hole at the bottom of the device.

If the battery in the remote control is not completely discharged, the green LED will light up.



Turn on Wi-Fi on your pc/laptop.

Find the TQC_remote network.



Connect to the TQC_remote network.

The password of the network: 123456789



Open a browser and enter the IP address 192.168.4.1/update in the search bar.







- After opening the website, this interface welcomes you, where you have to upload the latest firmware, you can simply drag&drop it.
- After loading the firmware, uploading will start immediately. At the end, it says **OTA Success**.



















